

Kit Includes

48 Litres Per Minute
Vinyl Drain with Clamping Ring
1½" Connection
Anti Odour Barrier
Plastic or Steel Grate





Before installing Ensure the drain is suitable for your requirements and you have all components to complete the installation

Important

Read all the pages of these instructions fully and thoroughly before you commence installation and keep in a safe location for future reference.

Plumbing

All plumbing works should be carried out by a fully qualified professional plumber.

Sub Floor

It is important that SharpDrain is installed onto a strong, level, stable floor. Movement could affect the performance of your wetroom.

Checklist/Safety Notes

- Check you have all components before installation. If you do not have all the components, do not install and contact your retailer.
- Check all the contents for damage. If any parts are damaged, do not install and contact your retailer.
- SharpDrain must be installed flat and horizontal.
- Check the location of pipes, electrical cables and all other services prior to drilling, cutting and screwing into walls, ceilings and floors.
- Ensure your tools for installation are fit for purpose and follow manufacturer's instructions provided with the tools.
- The area / room must be clean, dust free with first fix plumbing and electrics in place prior to applying the vinyl.
- Always ensure that the Installation area is kept safe, especially from children and pets.
- Safety goggles and masks should be worn at all times.

Liability


The Manufacturer will not accept any liability for failure if SharpDrain has been installed incorrectly and with disregard to the instructions.

Minimum floor depth (76mm) plastic vinyl horizontal drain which can be installed anywhere in a wetroom or be used as secondary drainage. Perfect for areas that have little floor depth available. The clamping ring securely holds the vinyl in place. Available with a white plastic or Brushed Stainless Steel Grate.


1

Install the drain and connect the pipework. test the connection is watertight before proceeding. Create the fall to the drain. The drain must be installed onto a strong and stable floor.



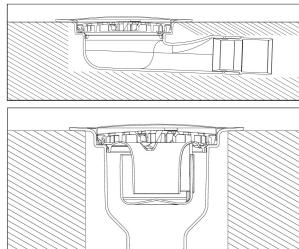


2

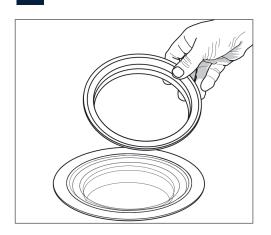


Remove the grey clamping ring from the drain and keep it for installation later.

3

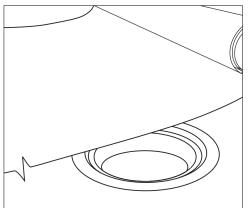


Install vinyl on the floor and over the drain.

4

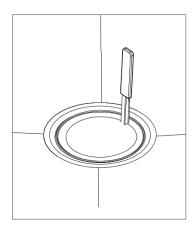

Cut a hole in the vinyl leaving enough to lap into the drain.



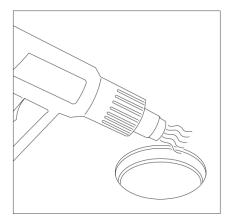


Heat the vinyl and lap it into the drain.

6



Push the clamping ring and grate down into the drain.

Cleaning & Maintenance

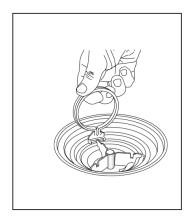



Remove the grate. Pull trap out of the drain and clean. Place back into the drain.